


BWL CORE BARREL

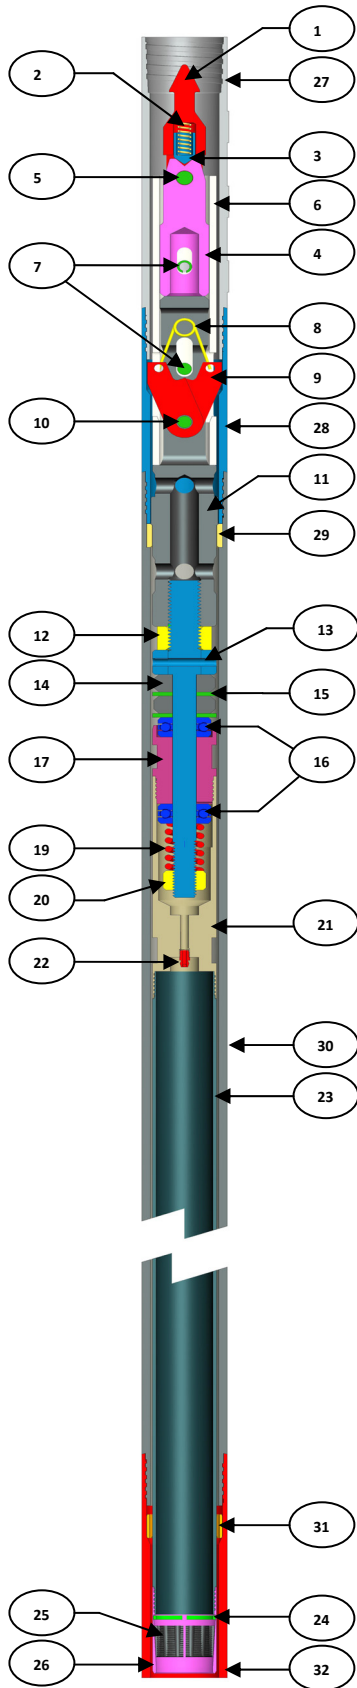

	ITEM DESCRIPTION	PART NUMBERS
1-32	BWL CORE BARREL 3.0m / 10 ft	14-00-100
1-32	BWL CORE BARREL 1.5m / 5 ft	14-00-110
1-26	BWL INNER TUBE ASSEMBLY	14-00-120
1-22	BWL HEAD ASSEMBLY	14-00-130
1	SPEARHEAD POINT	16-03-001
2	COMPRESSION SPRING	16-03-002
3	DETENT PLUNGER	16-03-003
4	POINT BODY	14-03-001
5	SOLID DOWELL 7/16" x 1"	16-03-005
6	CASE LATCH	14-03-002
7	SPRING DOWELL 3/8" x 1 5/8" - 2 NOS.	14-03-003
8	LATCH SPRING	14-03-004
9	BWL LATCH - 2 NOS.	14-03-005
10	SOLID DOWELL 3/8" x 1 1/4"	14-03-006
11	BODY LATCH	14-03-007
12	ADJUSTING HEX NUT	14-03-008
13	ADJUSTING SPINDLE	14-03-009
14	SHUT OFF VALVE - 2 NOS.	14-03-010
15	WASHER - 2 NOS.	14-03-011
16	THRUST BEARINGS - 2 NOS.	14-03-012
17	BEARING SPINDLE	14-03-014
18	GREASE FITTING	16-03-024
19	COMPRESSION SPRING	14-03-016
20	NYLOCK NUT , 5/8" UNC	14-03-017
21	INNER TUBE CAP	14-03-018
22	GREASE FITTING	16-03-024
23	INNER TUBE 1.5m / 5 ft	14-03-019
23	INNER TUBE 3.0m/ 10 ft	14-03-020
24	RING STOP	14-03-021
25	CORE LIFTER	14-03-022
26	CORE LIFTER CASE	14-03-023
27	LOCKING COUPLING	14-02-001
28	ADAPTER COUPLING	14-02-002
29	RING LANDING	14-02-003
30	OUTER TUBE 1.5m / 5 ft	14-02-004
30	OUTER TUBE 3.0m/ 10 ft	14-02-005
31	STABILIZER RING	14-02-006
32	THREAD PROTECTOR	14-02-007

Head Office: 524, Arun Chambers, Tardeo, Mumbai 400 034. INDIA.

Factory: Hadapsar, Pune. Tel.: +91-22-6663 5452 / 2351 6141

Email: sales@kuvawalacoredrill.com / mgk@kuvawalacoredrill.com

www.kuvawalacoredrill.com