


H3WL CORE BARREL

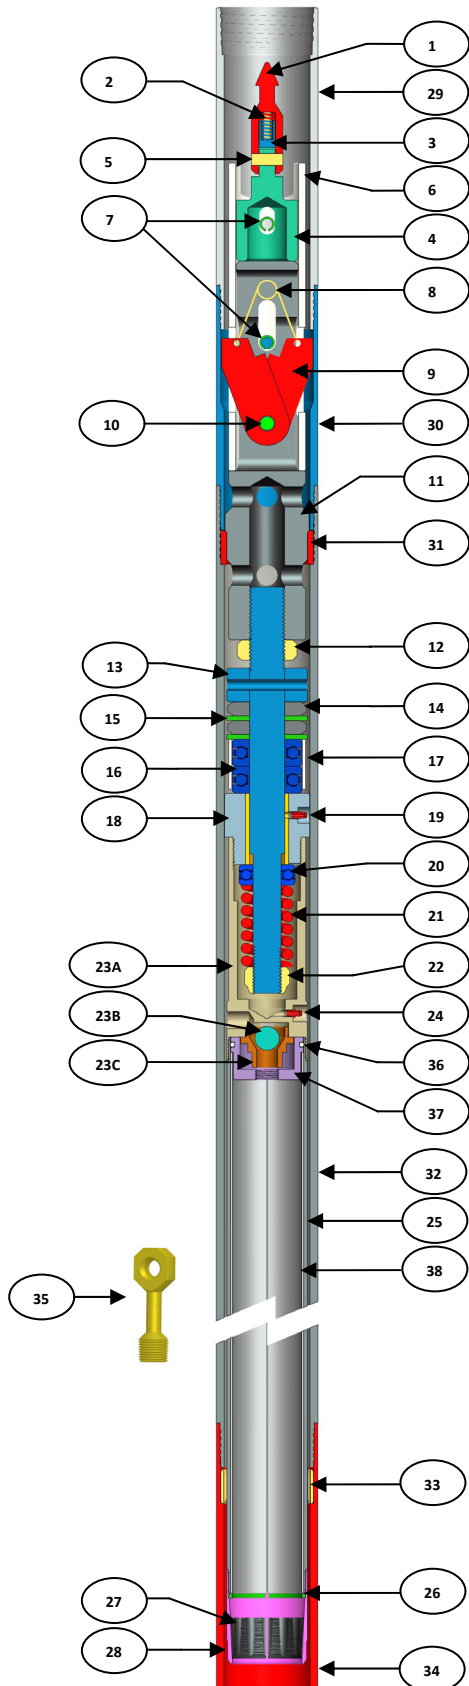

	ITEM DESCRIPTION	PART NUMBERS
1-39	H3WL CORE BARREL 3.0m / 10 ft	18-00-150
1-39	H3WL CORE BARREL 1.5m / 5 ft	18-00-160
1-28	H3WL INNER TUBE ASSEMBLY	18-00-170
1-24	HWL HEAD ASSEMBLY	18-00-130
1	SPEARHEAD POINT	16-03-001
2	COMPRESSION SPRING	16-03-002
3	DETENT PLUNGER	16-03-003
4	POINT BODY	18-03-001
5	SOLID DOWELL 7/16" x 1"	16-03-005
6	CASE LATCH	18-04-001
7	SPRING DOWELL 1/2" x 2 3/4" - 2 NOS.	18-03-003
8	LATCH SPRING	18-03-004
9	HWL LATCH - 2 NOS.	18-04-002
10	SOLID DOWELL 1/2" x 2 1/8"	18-03-006
11	BODY LATCH	18-04-003
12	ADJUSTING HEX NUT	18-03-010
13	ADJUSTING SPINDLE	18-03-011
14	SHUT OFF VALVE - 2 NOS.	18-03-012
15	WASHER - 2 NOS.	18-03-013
16	THRUST BEARINGS - 2 NOS.	18-03-014
17	BEARING COVER	18-03-015
18	BEARING SPINDLE	18-03-016
19	GREASE FITTING	16-03-024
20	THRUST BEARING - 1 NO.	18-03-017
21	COMPRESSION SPRING	18-03-018
22	NYLOCK NUT, 1" UNC	18-03-019
23	INNER TUBE CAP ASSEMBLY	18-03-020
23A	INNER TUBE CAP	18-03-021
23B	STAINLESS STEEL BALL , 22 mm	16-03-014
23C	CHECK VALVE BODY	18-03-022
24	GREASE FITTING	16-03-024
25	INNER TUBE 1.5m / 5 ft	18-03-023
25	INNER TUBE 3.0m/ 10 ft	18-03-024
26	RING STOP 3T	18-05-025
27	CORE LIFTER 3T	18-05-026
28	CORE LIFTER CASE 3T	18-05-027
29	LOCKING COUPLING	18-02-001
30	ADAPTER COUPLING	18-02-002
31	RING LANDING	18-02-003
32	OUTER TUBE 1.5m / 5 ft	18-02-004
32	OUTER TUBE 3.0m/ 10 ft	18-02-005
33	STABILIZER RING	18-02-006
34	THREAD PROTECTOR	18-02-007
35	PISTON PLUG	18-05-001
36	O RING	18-05-002
37	CORE EJECTION PISTON	18-05-003
38	SPLIT TUBE 1.5m / 5ft	18-05-004
38	SPLIT TUBE 3.0m / 10 ft	18-05-005
39	PUMP OUT ADAPTOR 1/2" NPT	18-05-006