


N3WL CORE BARREL

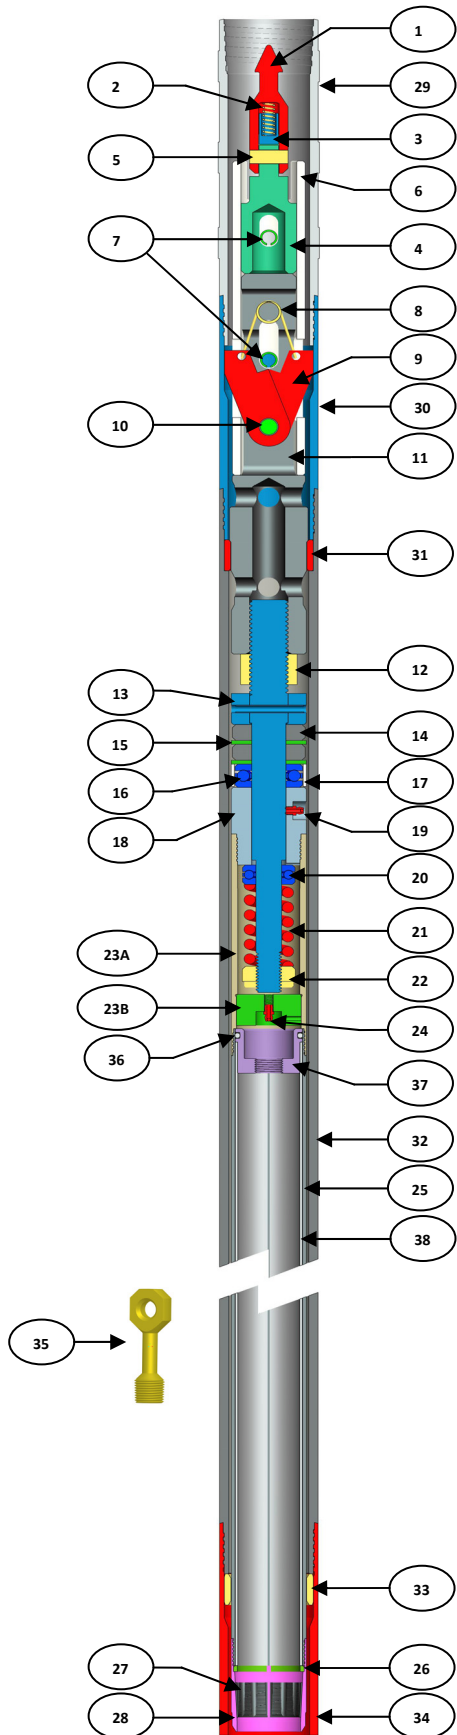

	ITEM DESCRIPTION	PART NUMBERS
1-39	N3WL CORE BARREL 3.0m / 10 ft	16-00-300
1-39	N3WL CORE BARREL 1.5m / 5 ft	16-00-310
1-28	N3WL INNER TUBE ASSEMBLY	16-00-320
1-24	N3WL HEAD ASSEMBLY	16-00-330
1	SPEARHEAD POINT	16-03-001
2	COMPRESSION SPRING	16-03-002
3	DETENT PLUNGER	16-03-003
4	POINT BODY	16-03-004
5	SOLID DOWELL 7/16" x 1"	16-03-005
6	CASE LATCH	16-04-001
7	SPRING DOWELL 1/2" x 2" - 2 NOS.	16-03-007
8	LATCH SPRING	16-03-008
9	NWL LATCH - 2 NOS.	16-04-002
10	SOLID DOWELL 1/2" x 1 1/2"	16-03-010
11	BODY LATCH	16-04-003
12	ADJUSTING HEX NUT	16-03-017
13	ADJUSTING SPINDLE	16-03-018
14	SHUT OFF VALVE - 2 NOS.	16-03-019
15	WASHER - 2 NOS.	16-03-020
16	THRUST BEARING	16-03-021
17	BEARING COVER	16-03-022
18	BEARING SPINDLE	16-03-023
19	GREASE FITTING	16-03-024
20	THRUST BEARING	16-03-025
21	COMPRESSION SPRING	16-03-026
22	NYLOCK NUT, 3/4" UNC	16-03-027
23	INNER TUBE CAP ASSEMBLY	16-03-028
24	GREASE FITTING	16-03-024
25	INNER TUBE 1.5m / 5 ft	16-03-029
25	INNER TUBE 3.0m / 10 ft	16-03-030
26	RING STOP	16-03-031
27	CORE LIFTER	16-03-032
28	CORE LIFTER CASE	16-03-033
29	LOCKING COUPLING	16-02-001
30	ADAPTER COUPLING	16-02-002
31	RING LANDING	16-02-003
32	OUTER TUBE 1.5m / 5 ft	16-02-004
32	OUTER TUBE 3.0m / 10 ft	16-02-005
33	STABILIZER RING	16-02-006
34	THREAD PROTECTOR	16-02-007
35	PISTON PLUG	17-04-001
36	O RING	17-04-002
37	CORE EJECTION PISTON	17-04-003
38	SPLIT TUBE 1.5m / 5ft	17-04-004
38	SPLIT TUBE 3.0m / 10 ft	17-04-005
39	PUMP OUT ADAPTOR 1/2" NPT	17-04-006

Head Office: 524, Arun Chambers, Tardeo, Mumbai 400 034. INDIA.

Factory: Hadapsar, Pune. Tel.: +91-22-6663 5452 / 2351 6141

Email: sales@kuvawalacoredrill.com / mgk@kuvawalacoredrill.com

www.kuvawalacoredrill.com